


Installation Instructions for the 1991-1993 GM 4T60E Without PWM TCC Internal Wire Harness

This wire harness will replace the following GM part numbers: 12082981 and 12121131

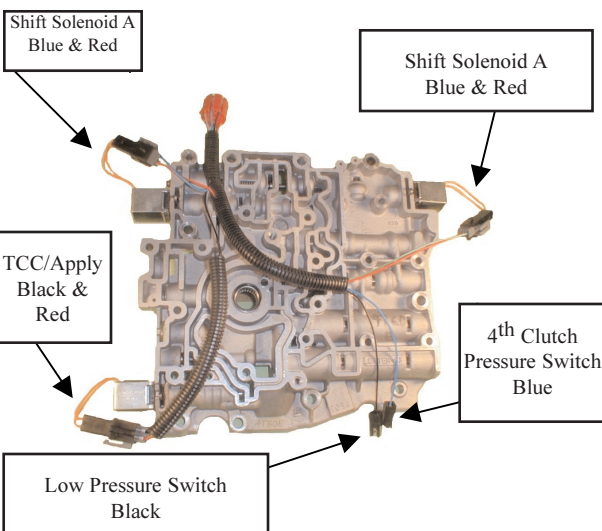


1. Note the position of the original wire harness and connectors on the valve body, then remove original wire harness from the transmission.
2. Place the new wiring harness over the valve body in the same position as the original.
3. Connect solenoids to the corresponding keyed connector. See illustration.
4. Connect the two pressure switches.



Form #4334, Rev. B, 01-28-02

Installation Instructions for the 1991-1993 GM 4T60E Without PWM TCC Internal Wire Harness

This wire harness will replace the following GM part numbers: 12082981 and 12121131

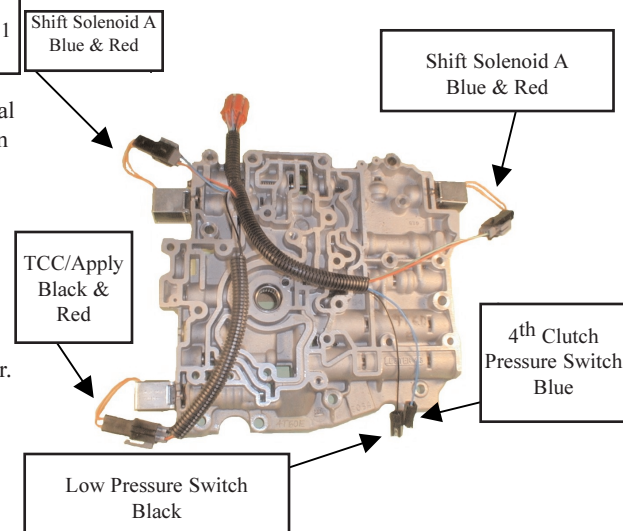


1. Note the position of the original wire harness and connectors on the valve body, then remove original wire harness from the transmission.
2. Place the new wiring harness over the valve body in the same position as the original.
3. Connect solenoids to the corresponding keyed connector. See illustration.
4. Connect the two pressure switches.



Form #4334, Rev. B, 01-28-02

Installation Instructions for the 1991-1993 GM 4T60E Without PWM TCC Internal Wire Harness

This wire harness will replace the following GM part numbers: 12082981 and 12121131

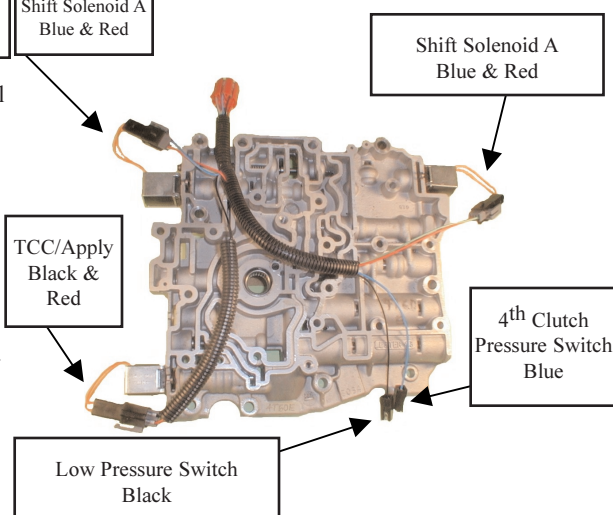


1. Note the position of the original wire harness and connectors on the valve body, then remove original wire harness from the transmission.
2. Place the new wiring harness over the valve body in the same position as the original.
3. Connect solenoids to the corresponding keyed connector. See illustration.
4. Connect the two pressure switches.



Form #4334, Rev. B, 01-28-02

Installation Instructions for the 1991-1993 GM 4T60E Without PWM TCC Internal Wire Harness

This wire harness will replace the following GM part numbers: 12082981 and 12121131

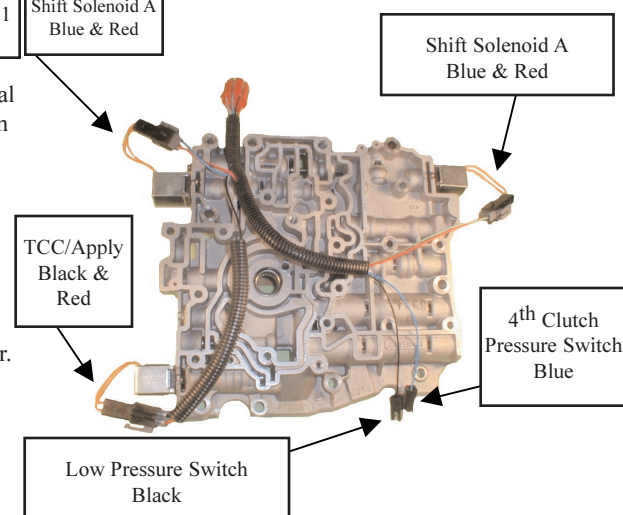

1. Note the position of the original wire harness and connectors on the valve body, then remove original wire harness from the transmission.
2. Place the new wiring harness over the valve body in the same position as the original.
3. Connect solenoids to the corresponding keyed connector. See illustration.
4. Connect the two pressure switches.



Form #4334, Rev. B, 01-28-02