

Installation Instructions for Ford A4LD Transmission Case Through Connector

These instructions are for the **Ford A4LD** 2 pin and 3 pin case connector kits. These connector kits are designed for use with only the Original Equipment solenoids. Complete Rostra solenoid kits are available and come with integral case connector.

1. Remove old case connector and discard.
2. Lubricate the o-rings on the Rostra case connector.
3. Install Rostra case connector with the locating tab facing the outside of the transmission case as shown. Use care as to not cut the o-ring when assembling into the case. A slight rotating motion may ease assembly.

NOTE: the valve body does not have to be removed in order to install the case connector.


4. Depending on model year of vehicle, assemble wires as described below.
5. Assemble the snap ring to the upper groove in the case connector to hold it in place.

85-88 Lock-up Units:

1. Assemble orange and red lead wires to lock-up solenoid as shown.

89-95 Dual Solenoid Units:

1. Assemble an orange and red lead wire to the lock-up solenoid as shown.
2. Assemble an orange and blue lead wire to the 3-4 shift solenoid as shown.

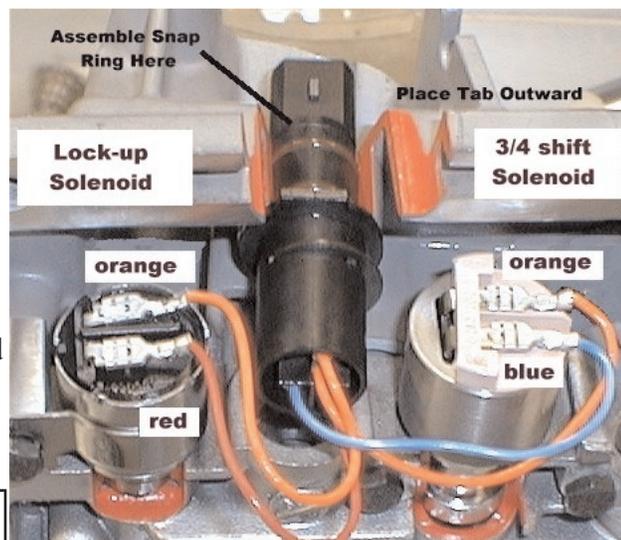

Form #4440, Rev. B, 11-30-01

Installation Instructions for Ford A4LD Transmission Case Through Connector

These instructions are for the **Ford A4LD** 2 pin and 3 pin case connector kits. These connector kits are designed for use with only the Original Equipment solenoids. Complete Rostra solenoid kits are available and come with integral case connector.

1. Remove old case connector and discard.
2. Lubricate the o-rings on the Rostra case connector.
3. Install Rostra case connector with the locating tab facing the outside of the transmission case as shown. Use care as to not cut the o-ring when assembling into the case. A slight rotating motion may ease assembly.

NOTE: the valve body does not have to be removed in order to install the case connector.


4. Depending on model year of vehicle, assemble wires as described below.
5. Assemble the snap ring to the upper groove in the case connector to hold it in place.

85-88 Lock-up Units:

1. Assemble orange and red lead wires to lock-up solenoid as shown.

89-95 Dual Solenoid Units:

1. Assemble an orange and red lead wire to the lock-up solenoid as shown.
2. Assemble an orange and blue lead wire to the 3-4 shift solenoid as shown.

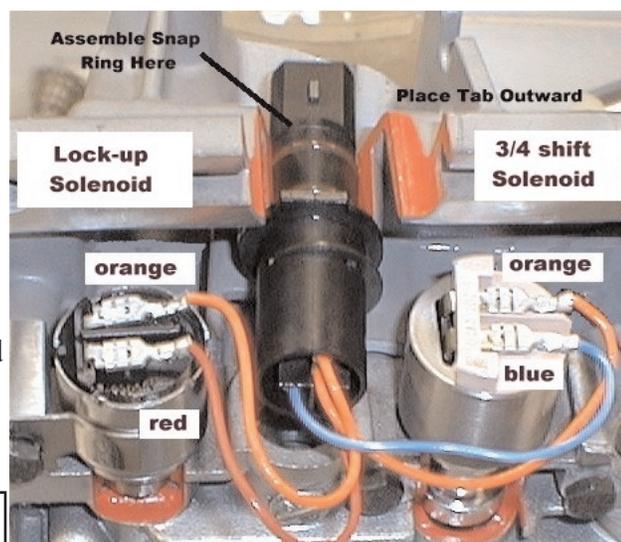

Form #4440, Rev. B, 11-30-01